



Compression Fittings

Assembly Instructions - Sizes 90mm to 110mm


1. Unscrew the fitting, leaving the grip ring a side. Thread the nut, the insert and the O-ring on the pipe.

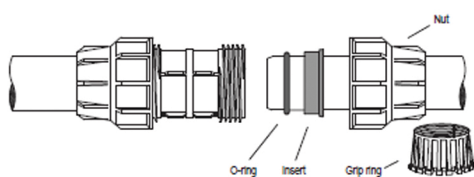


2. Push the pipe into the fitting until it reaches the internal edge stopper. Advance the O-ring and the insert towards the body of the fitting.

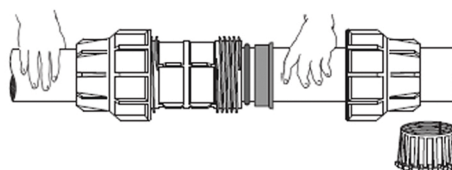


3. Tighten the nut until it reaches the end of the thread, using a suitable wrench

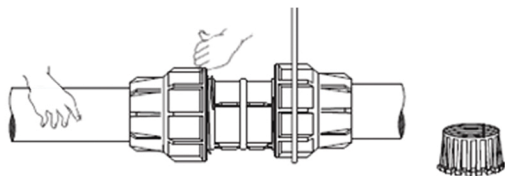


4. Unscrew the nut and remove it from the body of the fitting.

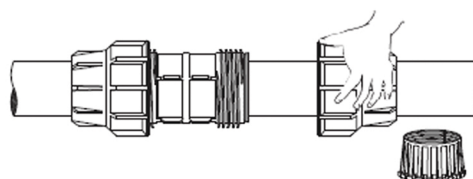


5. Open the grip ring and place it on the pipe, next to the insert.

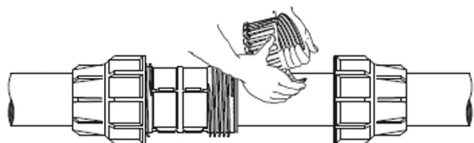

6. The fitting is now ready for final tightening.

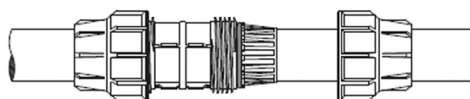

7. Tighten the nut, using a Plas-Fit wrench.

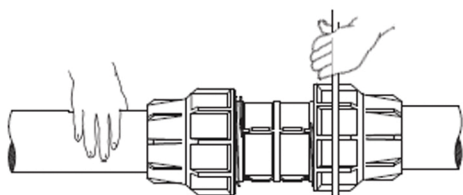

RECYCLE AFTER USE
(PP PLASTIC MATERIAL)